



Ref #	Part Number	Description	Qty
1	FS1992-01	Hex Screw	4
2	FS1992-02	Waher	8
3	FS1992-03	Nut	4
4	FS1992-04	Hammer Case	1
5	FS1992-05	Assisant Side Handle	1
6	FS1992-06	Bolt	4
7	FS1992-07	Washer	4
8	FS1992-08	Gasket	1
9	FS1992-09	Oil Seal	1
10	FS1992-10	Anvil Bushing	1
11	FS1992-11	Retainer Ring	1
12	FS1992-12	O-Ring	1
13	FS1992-13	Anvil (8 inch)	1
	FS1992-13S	Anvil (3 inch)	1
14	FS1992-14	Hammer Bushing	1
15	FS1992-15	Hammer Dog	1
16	FS1992-16	Cam	1
17	FS1992-17	Hammer Cage	1
18	FS1992-18	Steel Washer	1
19	FS1992-19	Motor Housing	1
20	FS1992-20	Ball Bearing	2
21	FS1992-21	End Plate	2
22	FS1992-22	Rotor Blade	6
23	FS1992-23	Rotor	1
24	FS1992-24	Dowel Pin	2

Ref #	Part Number	Description	Qty.
25	FS1992-25	Air Cylinder	1
26	FS1992-26	Pin	1
27	FS1992-27	Gasket	1
28	FS1992-28	Back Handle	1
29	FS1992-29	Regulator Pin	1
30	FS1992-30	Hex Screw	2
31	FS1992-31	O-Ring	2
32	FS1992-32	Valve Bushing	1
33	FS1992-33	O Ring	1
34	FS1992-34	Regulator Body	1
35	FS1992-35	Spring	1
36	FS1992-36	Steel Ball	1
37	FS1992-37	Spring	1
38	FS1992-38	Throttle Valve Stem	1
39	FS1992-39	Throttle Valve	1
40	FS1992-40	Inlet Spring	1
41	FS1992-41	O-Ring	2
42	FS1992-42	Hex Screw	1
43	FS1992-43	Air Inlet Fitting	1
44	FS1992-44	Air Inlet Screen	1
45	FS1992-45	Hose Connector	1
46	FS1992-46	Hex Screw	4
47	FS1992-47	Pin	1
48	FS1992-48	Pin	1
49	FS1992-49	Trigger-Inside	1