



www.ameintl.net

# How to Clear an Air Lock on a 14460



1. Make sure release valve is closed.




2. Locate rubber filler plug.



3. Remove filler plug with flat head screw driver.



4. DO NOT LOOSE filler plug. You will need to reinstall plug later.

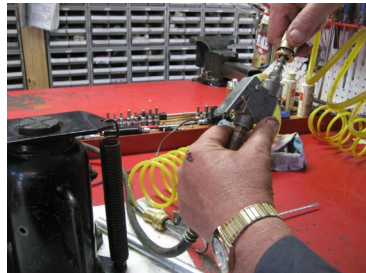

5. Connect air supply to bottle jack air valve.



6. Use separate air line and rubber tipped air chuck to insert air into filler plug. Run both air supplies at the same time for 3-5 second thru bottle



7. Air lock should be removed from bottle jack and jack should be to normal operation. Replace rubber plug.

**Phone**  
352-799-1111

**Toll Free**  
1-877-755-4263

**2324 Circuit Way**  
**Brooksville, Fl. 34604**

**E-Mail**  
sales@ameintl.net

**Fax**  
352-799-1112